

OWNERS MANUAL

Thank you for choosing the **BOBCAT** ash separator to keep your home safe, clean and dust-free. The simple steps below will help you set up and maintain your **BOBCAT**. For additional assistance using and maintaining your **BOBCAT** ash separator, please contact our live customer support & service hotline at **1.800.568.3949**.

A1000 OR A1001 BOBCAT

INCLUDES:

- A. 1 CREVICE TOOL #4P19
- B. 1 PELLET STOVE CLEANING HOSE #1P24
- C. 1 HORSE HAIR BRUSH #4P20
- **D.** 1 1½ in to 1¼ in ADAPTOR #A1060
- E. 1 METAL WAND #A1059

REPLACEMENT PARTS:

- F. 1 RUBBER GASKET #A1061
- G. 1 ASSEMBLED LID #A1066
- H. 1 BLACK CANISTER #A1074 OR FLAG CANISTER #A1075
- I. 1 SPARK ARRESTER #A1054
- J. 1 1½ in METAL HOSE #A1055
- **K.** 1 HEPA FILTER #A1053
- L. 1 LID SEAL (NOT SHOWN) #A1068





FOR BEST RESULTS – Place nozzle directly on bottom of firebox and rub steadily on brick to remove ash. Run vacuum for 30 seconds to clear hose of ash.

WARNING! Do not use on burning fire or on burning embers.







SETUP STEPS



1 Insert HEPA filter into spark arrester.



2. Install HEPA filter and spark arrester to underside of lid. Twist clock-wise ensuring all 3 latches "lock" into place.



3. Use both hands and press firmly to attach lid to canister.



Push BOBCAT metal hose into opening on outter-edge of lid until secure.



Push home vacuum hose into opening in middle of lid until secure.



6. Insert brush and crevice tool into storage **7.** Fit metal wand holes on either side at back of lid. Press pellet stove cleaning hose to hose fitting on front left side. Slide adaptor on storage hole on front right of lid.



securely into metal hose.



To use accessories, press the adaptor on the metal hose or metal wand.

FILTER CLEANING STEPS



0M055_0613



Keep BOBCAT lid on canister while cleaning filter. Lift and release the instant filter cleaning handle 5 times.



To empty canister, remove BOBCAT lid by pulling the tabs away from canister and lift.

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER
HOW DO I AVOID CLOGGING THE NOZZLE?	Place nozzle directly on firebrick and rub to move the large particles out of the way, maintain air flow and to crush larger particles.
	Be sure the nozzle is not in backwards. Put the large end in the hose and the crimped end out.
WHY IS THERE POOR SUCTION?	Filter may be coated. Clean filter. See instructions on Filter Cleaning above.
	Check vacuum source filter (house vacuum).
	Clogged nozzle/hose. See clogged nozzle above.
WHY IS THE HOSE HOT?	Cleaning TOO WARM of ash. Let ash cool down. NEVER use gloves to compensate for a HOT hose.
	Do not use gloves when vacuuming ash.
DUST ESCAPING	Check filter for holes, and if necessary replace. (#A1053).
	Check all 3 latches on the spark arrester are locked in place.

Check that hoses are secure. Re-secure hose in lid.